


Konica DR512 Drum Conversion Chip Installation Instructions

NATT #: 06037001 Drum Unit Conversion Chip

OEM#: Chip converts A2XN0RD (DR512K) to A2XN0TD (DR512 CMY)

1. Locate the chip on the drum.

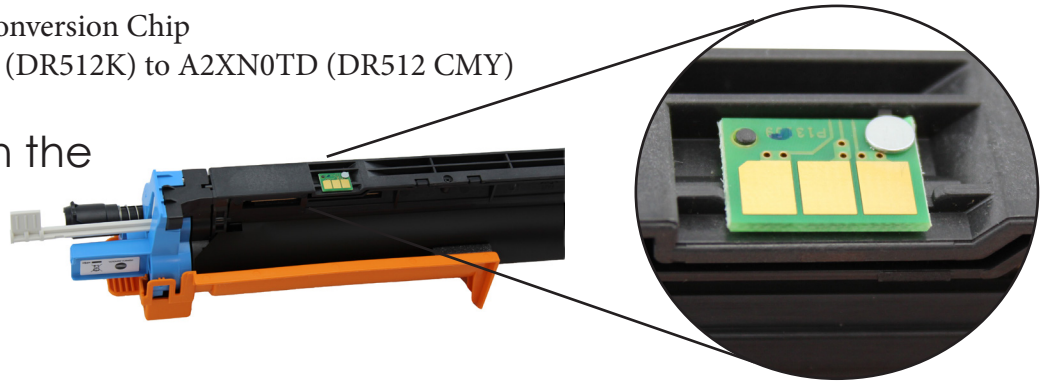


2. Slide the head of a slotted screwdriver between the chip and the drum unit. Twist the screwdriver counterclockwise until the chip is dislodged from the drum unit. The metal rivet or the chip may break; discard broken pieces.



3. Apply small dabs of Loctite Super Glue in the corners opposite the rivet as shown.

Loctite Super Glue
NATT #: 00002025

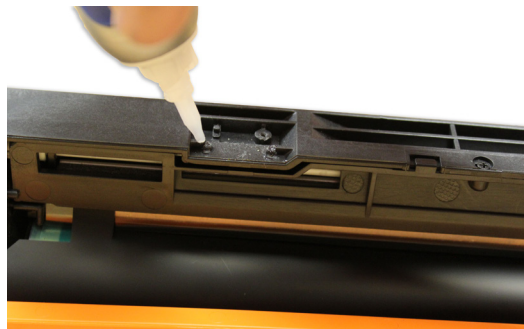

4. Position the replacement conversion chip and press down firmly. Allow the glue to fully cure.



5. Install the drum unit according to the manufacturer's instructions.

To learn more about **NA Trading** and our entire **Konica** product line, contact a product specialist or visit us online today.